

Purpose

MOD CBASEF sets the constant baseflow in Operation BASEFLOW at the beginning of the run if the date specified is during the run period.

The value is entered in units of flow (CMS or CFS).

This is a permanent change to the value stored in the Forecast Component parameter file.

Format

Use Format B3 with one date on the command card.

Forecast Group identifiers cannot be specified for this command.

```
.CBASEF date  
identifier value [ / opname ]
```

where date is the date which must be greater than or equal to  
Technique STARTRUN  
value is the constant baseflow in units of flow (CMS or CFS)

Example

In this example the constant baseflow used in conjunction with event API Operations is changed for several Segments.

```
.CBASEF 1123  
RPDM5 100.  
RAPM5 400.  
NULM5 200.
```