

VI.5.3D-PRNTLAST PROGRAM FCST HCL TECHNIQUE PRNTLAST

Purpose

Technique PRNTLAST sets how many of the most recent dates of carryover will be printed.

Valid values are NO (0) and YES (1).

The Global default is NO (0).

This Technique is Universal.

This Technique has one Argument which is the number of dates to be printed.

The Global default for the number of dates is zero.

Form of Input

PRNTLAST integer

where integer is from one to the number of carryover slots
available on the Forecast Component carryover files

Example

PRNTLAST 3

The three most recent dates of carryover will be printed.