

Purpose

Command RRSDUMP prints all data for an RRS station and data type in the Preprocessor Data Base.

The RRS header and statistics are printed followed by all data in the primary and free pool files displayed in both real and integer formats.

Input Data

<u>Card</u>	<u>Field</u>	<u>Format</u>	<u>Contents</u>
1	1		'@RRSDUMP'
2	1	A8	Station identifier
	2	A4	Data type

Repeat Card 2 to process additional stations and/or data types.

3	1		'END'
---	---	--	-------